



iVoice *Chef*



TS-B1315




Bilancia da cucina Parlante

Talking kitchen scale - Báscula de cocina hablante

Balance de cuisine Vocale - Sprechende Küchenwaage

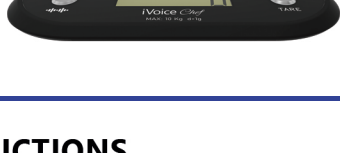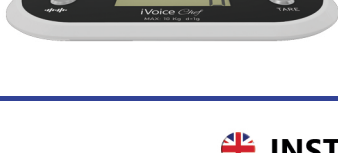

INSTRUCTIONS

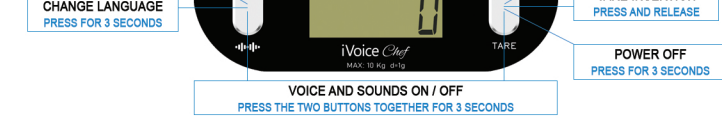

USE AND START-UP

Insert the batteries, paying attention to the + and - signs.

To turn on the scale, press and release button on the RIGHT, an audio signal will indicate that the scale is on and ready for use.

If the product does not appear to turn on, try replacing the batteries.

To turn off the scale, press the RIGHT button for 3 SECONDS, an audio signal will indicate that the scale is being switched off.

In any case, the scale will automatically switch itself off after 2 minutes of inactivity.

HOW TO CHANGE THE LANGUAGE

With the scale on, press the button on the LEFT for 3 SECONDS, an audio signal will indicate the selected language. By repeating this procedure, you will move on to the next language.

REPEAT WEIGHT

To hear the weight again, press and release the LEFT button, an audio signal will repeat the weight again.

TARE FEATURE

To deduct the weight of an ingredient already present on the scale plate, press and release the RIGHT button, an audio signal will indicate the insertion of the TARE and the zeroing of the weight.

Adding another ingredient, you will now have the new weight.

To know the weight of an ingredient or of a bowl already present on the scale plate, press and release the RIGHT button; by now removing the chosen ingredient, an audio signal will indicate its weight.

HOW TO ENABLE OR DISABLE THE SOUNDS AND THE VOICE

With the scale on, press both the LEFT and the RIGHT buttons simultaneously for 3 SECONDS, an audio signal will indicate the current audio setting.

To return to the previous setting, repeat the procedure.

OVERLOAD SIGNAL

When the scale exceeds the permitted weight (over 10 kg), an audio warning will indicate the excessive weight.

BATTERY REPLACEMENT SIGNAL

When the batteries need to be replaced, an audio warning will indicate the low battery status.

SCAN THE QR CODE TO LISTEN TO THE AUDIO INSTRUCTIONS



CONTENTS OF THE PACKAGE

- 1 Talking Kitchen Scale
- 2 1.5V AAA batteries
- 1 Instruction manual

TECHNICAL DATA

Model: iVoice Chef (TS-B1315)
Scale dimensions 21.7 x 16 x 3 cm
Maximum load: 10 Kg
Breakdown of weight: 1 g
1.5V AAA batteries
Material: Plastic, glass, metal



WARNINGS - CLEANING - CARE

- Place the scale on a hard, flat surface to ensure maximum accuracy.
- Clean the scale with a damp cloth but do not let water get inside it.
- When cleaning, do not use chemical cleaners.
- This scale contains a high precision weighing system, never drop it.
- Do not place the scale near devices with electromagnetic radiation.
- Do not use different types of batteries combining new and used ones.

ATTENTION

- Never leave children unsupervised with the packaging material or the scale.
- Remove the batteries if the scale is not used for an extended period.
- Do not expose the scale to heat sources.
- Do not recharge the batteries or throw them into fire, risking explosion.
- Should liquids leaks from the batteries, avoid contact with skin, eyes and mucous membranes.



WARRANTY

The product is covered by a 2-year warranty for weighing scale manufacturing defects.

The warranty is void in the following cases:

- Damage caused by improper use.
- For components subject to wear.
- Liability on the part of the customer.
- If the device had been opened.



To claim the warranty within its validity period, the customer must prove the purchase of the product.

You can assert your warranty rights against VIBAS within a period of 2 years.

In case of complaints, contact our 24hr assistance service below:

GREEN NUMBER: 800 70 82 78

assistenza@vibashopping.com

+39 333 7650390

VIBNS®



www.vibashopping.com



info@vibashopping.com



WhatsApp



Made in China

