





iVoice *Body*

TS-B8003



## Bilancia Parlante

Talking weighing scale   Báscula Hablante   Pèse-personne Vocal   Sprechende Waage

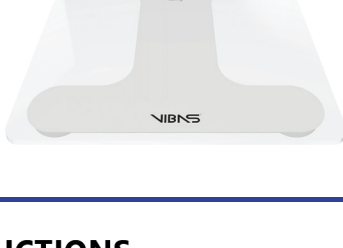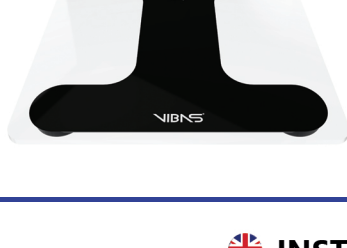

### INSTRUCTIONS

#### USE AND START-UP

- Insert the batteries paying attention to the **+** and **-** signs
- To turn on the scale, simply stand on it and the scale will announce your weight.
  - If the scale does not appear to turn on, try replacing the batteries.
- Be sure to calibrate the scale for maximum accuracy, following the enclosed **quick guide**.
- Once the weight has been announced, staying on the scale, the weight will be repeated a second time.
  - The scale switches itself off automatically.

#### HOW TO CHANGE THE LANGUAGE

With the scale on, press the **COMMAND** button located on the back of the scale and choose the desired language, a voice will indicate the chosen language.

ITALIAN  
It

ENGLISH  
En

SPANISH  
Es

FRENCH  
Fr

GERMAN  
De

#### HOW TO ENABLE OR DISABLE THE SOUNDS AND THE VOICE

With the scale on, press the **COMMAND** button behind the scale for **3 seconds**, an audio signal will indicate the current audio status.

VOICE ENABLED

on

VOICE DISABLED

off

#### OVERLOAD SIGNAL

When the scale exceeds the permitted weight (over 180 kg), an audio signal will indicate the overload.

OVERLOAD

OL

#### BATTERY REPLACEMENT SIGNAL

When the batteries need to be replaced, an audio signal will indicate the low battery status.

LOW BATTERY

LO

#### SCAN THE QR CODE TO LISTEN TO THE AUDIO INSTRUCTIONS



#### CONTENTS OF THE PACKAGE

- 1 Talking scale
- 2 1,5 V AAA batteries
- 1 Instruction manual
- 1 Quick Guide

#### TECHNICAL DATA

Model: iVoice Body (TS-B8003)  
Scale dimensions 30 x 30 x 2.5 cm  
Maximum capacity: 180 Kg  
Breakdown of weight: 0,1 Kg  
1,5 V AAA batteries  
Material: Glass, plastic, metal



### WARNINGS - CLEANING - CARE

- Place the scale on a hard, flat surface to ensure maximum accuracy.
- Clean the scale with a damp cloth but do not let water get inside it.
- When cleaning, do not use chemical cleaners.
- This scale contains a high precision weighing system, never drop it.
- Do not place the scale near devices with electromagnetic radiation.
- Do not use different types of batteries combining new and used ones.

#### ATTENTION

- Never leave children unsupervised with the packaging material or the scale.
- If the scale is damp or your feet are wet, do not step on it to avoid slipping.
- Do not step on one outer edge of the scale, or risk tipping over.
- Remove the batteries if the scale is not used for an extended period.
- Do not expose the scale to heat sources.
- Do not recharge the batteries or throw them into fire, risking explosion.
- Should liquids leak from the batteries, avoid contact with skin, eyes and mucous membranes.



### WARRANTY

The product is covered by a 2-year warranty for weighing scale manufacturing defects.

The warranty is void in the following cases:

- Damage caused by improper use.
- For components subject to wear.
- Liability on the part of the customer.
- If the device had been opened.



To claim the warranty within its validity period, the customer must prove the purchase of the product.

You can assert your warranty rights against VIBAS within a period of 2 years.

In case of complaints, contact our 24hr assistance service below:

**GREEN NUMBER: 800 70 82 78**

[assistenza@vibashopping.com](mailto:assistenza@vibashopping.com)

**+39 333 7650390**

VIBNS<sup>®</sup>



[www.vibashopping.com](http://www.vibashopping.com)



[info@vibashopping.com](mailto:info@vibashopping.com)



WhatsApp

**800 70 82 78**

CE  
Made in China

